
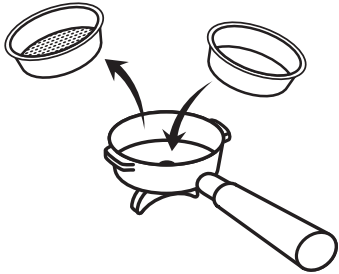
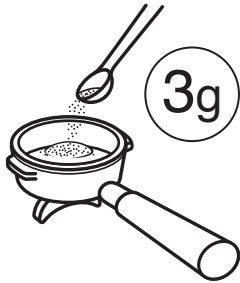
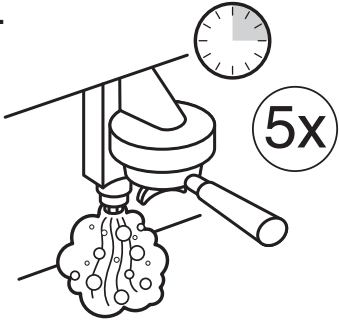
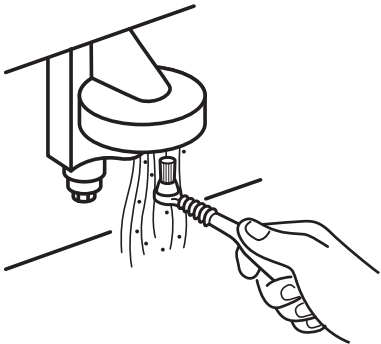
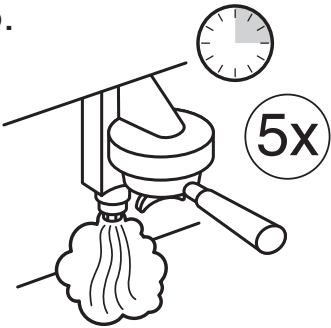
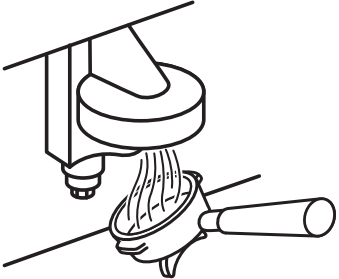
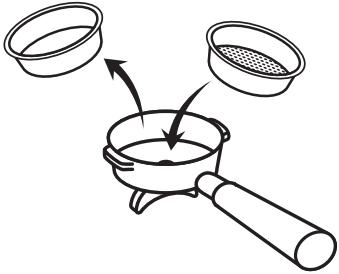


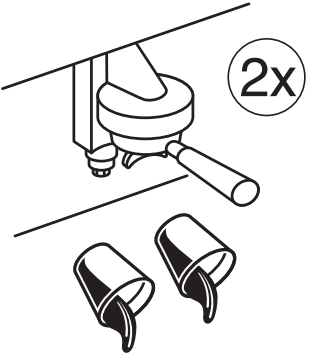

Backflush Instructions

| | | | |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1.</p>  <p>Replace the normal filter with "Blind" filter (No Holes).</p> | <p>2.</p>  <p>Place 1/2 tsp (3g) or less of JoeGlo Backflush Detergent onto "Blind" filter.</p> | <p>3.</p>  <p>With portafilter attached to the group, backflush machine by running the group five times in 15 second start/stop intervals.</p> | <p>4.</p>  <p>Remove Portafilter, discard leftover bits and run the group. Use a Coffeetool to get rid of coffee oils & loose grinds.</p> |
| <p>5.</p>  <p>With portafilter attached to group, backflush machine by running the group five times in 15 second start/stop intervals.</p> | <p>6.</p>  <p>Remove portafilter and run the group to thoroughly rinse clean.</p> | <p>7.</p>  <p>Remove the "Blind" filter and replace the normal filter.</p> | <p>8.</p>  <p>Pull and discard two test shots before serving.</p> |